


## II. Configuration Options *cont.*

### C. Multiple Phones - WITH land line (Decide which applies: 1 or 2)

#### 1. Using 2-line phones -

Each 2-line phone answers both land line and cell phone calls

- a. After connecting the DNT to the wall jack (using longer enclosed RJ-11 cord) and to your 2-line phone (using shorter cord), press the bell button on the DNT. The DNT should ring all the phones that are connected to line 2.

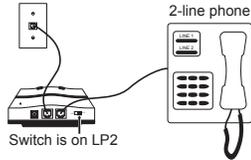

- b. Pick up the receiver of any 2-line phone connected to a wall jack in the home, and press line 2. The DNT will produce a busy signal until the cell phone is connected.


2. Using 1-line phones - You must choose for each 1-line phone whether it will use cell phone service or land line service, NOT both. By using line splitters, you can designate individual telephones for cell phone service.

a1.




If you will not have a land line phone present where you want to connect the DNT, connect the DNT (set to LP2) directly into the wall jack.

a2.

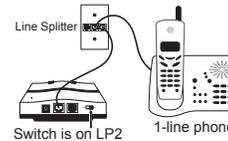

Otherwise, use a line splitter to connect the DNT (set to LP2), into the wall jack. Connect the line cord from the DNT to L1/L2 jack and connect the phone to L2 jack of the splitter.

b.




To provide cell service on various phone extensions, connect each phone to the L2 jack on a line splitter.

## III. Cell Phone Connection (Decide which applies: A or B)

### A. Connect with a Cable

1. Connect the cable to your cell phone data connector and to the DNT.

 If the cable has a third plug, it must be inserted into the headset port on the cell phone.

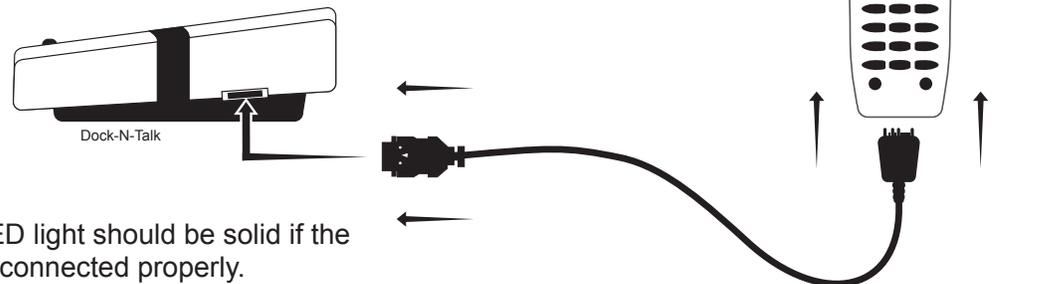

The green LED light should be solid if the cell phone is connected properly.

2. Pick up the receiver. The DNT will produce a normal dial tone when connected properly.

Connect with a cable




### B. Connect with a Bluetooth Module

1. Insert bluetooth module into the DNT.

2. Press and hold the bluetooth pairing button  on the DNT until both LED lights begin flashing rapidly.

3. In your cell phone's settings, choose bluetooth options. Put your cell phone in search/discover mode. Select DNT pairing. Select the DNT as the device to pair. When prompted, enter the pairing key or password 3774.

Wait until both green and blue LED lights are solid colors.

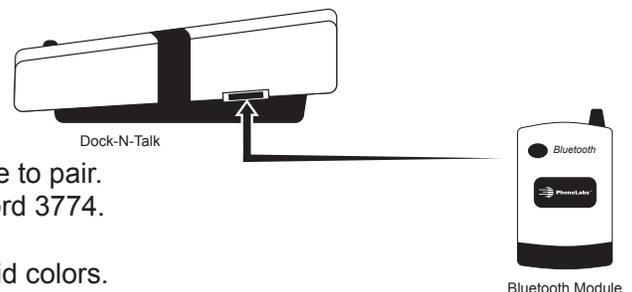

4. Pick up the receiver. The DNT will produce a dial tone if the cell phone is docked correctly.

Connect with a Bluetooth Module